

ACCORDION PARTITIONS**WARRANTY**

Hufcor Partitions are guaranteed against defects in material and workmanship for a period of two years excluding any abuse to the product. In addition, the pantographs and tracks are guaranteed for 10 years from date of installation.

The Hufcor Partitions for this installation have been custom made to the architects and owner's specifications. Each partition has been carefully fabricated and installed to provide many years of trouble free service.

The key to the life of the product is proper operation and care. The correct operation and recommended care are outline in this owners manual for your guidance.

If any malfunction of these partitions occurs, please phone your local Hufcor Distributor for service. This must be done immediately since Hufcor cannot be responsible for damages which results from delays or failure to advise Hufcor or Hufcor's local Distributor.

This partition was sold and installed by:

When calling either your Hufcor Distributor or Hufcor, please have the following information:

Job Name:

Hufcor Order #:

Installation Date:

Description of the Problem:

Person to Contact:

General


1. Permit operation of these partitions only by personnel who have been trained in accordance with these operating instructions.
2. Report any malfunction at once. (See recommended preventative maintenance.)

To Close Partition (Move partition from the stacked to extended position.)

1. Partitions to 10' wide-

Stand close to the partition facing the direction you wish to move the partition. Grasp the handle and walk towards opposite jamb, pulling partition with you. (Fig. 1) As you near jamb, accelerate pull until lead post is 3"-4" from jamb. Stop lead post of the partition to permit "slack" in partition to move to lead end. Guide latch into strike on jamb.

Fig. 1

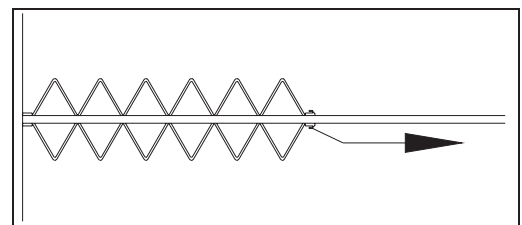

2. Partitions over 10' wide-

Use two people, one on either side of the lead post and close partition as in Step 1 above, or with one person, stand *facing* lead post with *back* to opening. Grasp both handles and begin to back across the opening, picking up speed as you move. (Fig. 2) As you near jamb, swing around to one side of the partition and push on one handle, continuing to accelerate partition movement until lead post is 3"-4" from jamb. Stop lead post of the partition to permit "slack" in partition to move to lead end. Guide latch into strike on jamb.

Fig. 2


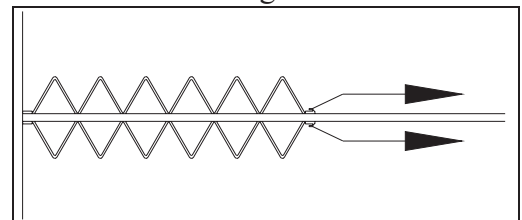


Fig. 3

3. Tall partitions with pendant pulls-


Stand facing lead post with back towards opening. Unsnap pendant pulls and start backing across opening, accelerating as you move. (Fig. 3) As you near jamb, release one pull and step around to same position illustrated in Fig. 1, pushing on pendant pull or handle and continuing to accelerate until lead post is 3-4" from jamb. Stop lead post of the partition to permit "slack" in partition to move to lead end. Guide latch into strike on jamb.

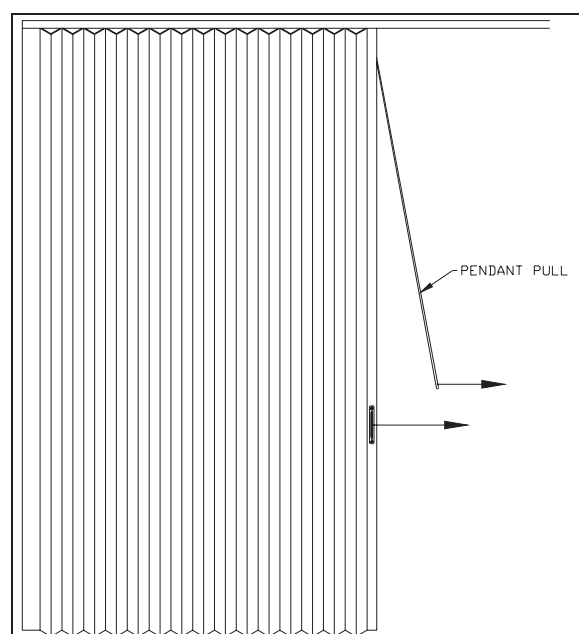

To Open Partition (Move partition from the extended to stacked position.)

Fig. 4

1. Check lock. If knob is in position "A" (with lines horizontal), turn 90 degrees so lines will be vertical as shown in "B". (Fig. 4)

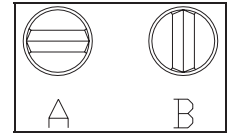

2. Small partitions with single handle-

Grasp handle with thumb at bottom rear and fingers on face of handle. Push with fingers while applying counter pressure with thumb. Handle will pivot back and release latch, allowing door to move away from jamb. (Fig. 5)

Fig. 5


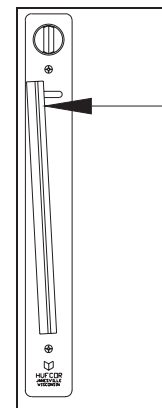


Fig. 6

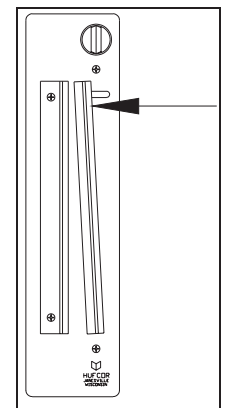

3. Large partition with double handle-

Grasp handle with thumb near top of face of smaller handle and fingers behind larger handle. "Pinch" hand allowing thumb to pivot front handle back and release latch, allowing door to move away from jamb. (Fig. 6)

4. Move partition away from jamb far enough to allow you to move between jamb and lead edge of partition. Facing the stack area, stand on either side of the partition and grasp the lead post at handle height; "walk" partition into the stack position.(Fig. 7)

5. Attach "tie-back" belt to hold partition securely in the stack position. (Fig. 8)

Fig. 8


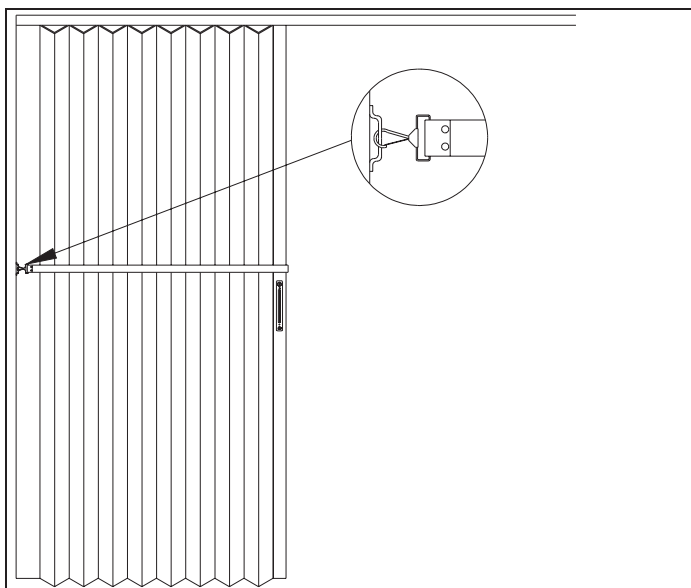


Fig. 7

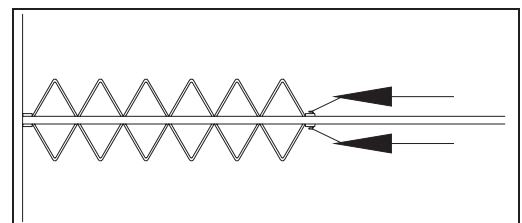

CARE AND MAINTENANCE

VINYL FABRIC SURFACE

The vinyl surface of your Hufcor partition may be cleaned with warm water and mild soap. Sponge the surface clean and wipe dry with a soft cloth. A soft brush may be used if dirt is difficult to remove. Carbon tetrachloride may be used for removal of grease and oil.

CAUTION: Do not use lacquer thinner or other strong chemicals except those listed above. Many floor cleaning materials contain chemicals harmful to vinyl. Care should be taken when using such compounds near the partition.

CARPET SURFACE

Commercial carpet cleaners may be used to clean carpeted surfaces. Follow the manufactures listed instructions.

ALUMINUM HARDWARE

The aluminum hardware on your Hufcor partition is anodized for freedom from discoloration and a long life. Mild soap and water is recommended for cleaning.

DAMAGE

Your Hufcor partition is of a unique construction that permits replacement of individual parts. Report all damage promptly to your local Hufcor distributor.

HUFCOR, Inc.

P.O. Box 591 • 2101 Kennedy Rd. • Janesville, WI 53547-0591

Phone: 800/356-6968 • Fax: 608/758-8253 • Email: info@hufcor.com

Website: www.hufcor.com